

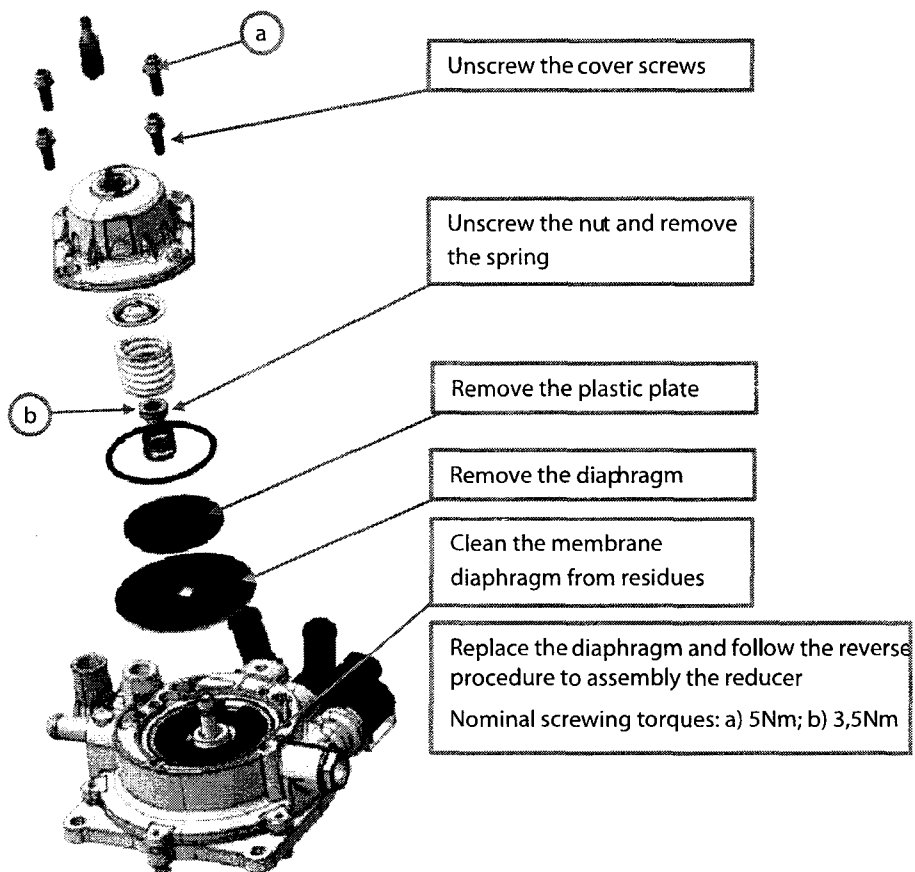
**Instructions to replace the diaphragm of the CPR - LPG  
pressure regulator (CPR-LPG and LINX version)**

To conduct the operations you need the follow tools:

- Torx screwdriver TX25

- Wrench n°14

First of all, remove the pressure regulator from the engine compartment.

**CAUTION:**

**AFTER THE MAINTENANCE OPERATIONS, CHECK IF THE REGULATOR AND THE SYSTEM SHOW SOME LEAKAGES FROM THE DIAPHRAGM OR FROM OTHER CONNECTIONS. IF THERE ARE SOME LEAKAGES CHECK THE RIGHT ASSEMBLY.**